

---

*Brand List*

---

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
ABEX	012	023			
ACER(宏碁)	255				
ADMIRAL	016,133,137,156, 201		103		
ADVENTURA	108		023		
AIDOU(愛多)			223,227		222
AIKO	018		052		
AIWA	113,228,229,230		012,023,113,239		009,076,114,205, 220
AKAI	001,008,053,084, 085,086,097,231, 232,233		043,044,046,057, 059,060,064,089, 091,120		115,135,137
ALARON	049,212,213				
ALPHASTAR DSR				051,123	
ALPINE					244
AMARK	002,012,014				
AMBASSADOR	100				
AMERICAN HIGH			245		
AMOISONIC			219,221,224,234		058
AMSTRAD	100				
ANAM	032,040,052	030,128			
ANAM NATIONAL		128			
ANQIANO					085
ANVISION				145,146	
AOC(艾德蒙)	002,006,008,011, 012,014,015,018, 019,026,027,028, 030,031,032,040, 049,052,084,085, 086,089,097,110, 147,178,216,220, 231,232,233,244	127			
APO				155	
ARCAM					242
ASHA			055,084		
ASIA GIANT				152,160	
AUDIO DYNAMIC			082		
AUDIOVOX	018,040,052,058	030	012		
AVLIGHT		120			059
AWA	002,014,039,045, 166,211,222				
BAYSONIC	040,052	030			
BEAUMARK			055,084		
BEIJING(北京)		015,018,019,024, 025,027			
BELCOR	084,085,086,231, 232,233				
BELL & HOWELL	002,078,156	122	042		

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD..)</i>
BESTLINK				091,172	
BRADFORD	040,052	030			
BROCKWOOD	084,085,086,231, 232,233				
BROKSONIC	048	038	063,064,065,086, 087,255		
CABLESTAR				145,146	
CAINI					227
CALIX			012		
CANDLE/CITIZEN	006,012,018,040, 052,084,085,086, 087,097,104,105, 106,108,110,128, 159,161,214,231, 232,233	023,129,133	012,072,077,080, 087,111		
CANON			053,054,245		
CAPEHART			061		
CARVER	045,211,249	001,020,024,028, 035,037,052,082	249		
CCE			052,088		
CELEBRITY	202				
CENTURION	073,088,097				
CHANGHONG(長)		001,004,008,011, 012,015,018,019, 024,027	211,212,222,243		
CHAPARRAL				230	
CHUN YUN(青雲)	002,008,009,012, 014,040,052,084, 220			069	
CHUNG HSIN(中興)	003,008,009,011, 012				
CINERAL	018,058		052		
CITOH				216	
CLAIRTONE	147				
COLORTYME	086,094,097				
COLT			088		
CONCERTO	086,087,097,161	129			
CONROWA(高路華)		026,027			
CONTEC/CONY	003,007,008,012, 040,052,146,147, 148	030,041			
CONWA		042,043			
CORONADO	012				
CRAIG	040,052	030	012,018,055,084, 088,254		
CROSLEY	045,211	001,020,024,028, 035,037,052,082			
CROWN(王冠,皇冠)	012,040,052	019,023,027,030			

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>	
CURTIS MATHES	002,006,008,010, 012,016,028,030, 031,033,045,058, 073,076,077,078, 084,085,086,088, 097,099,110,112, 133,135,137,156, 159,162,177,185, 201,206,211,216, 231,232,233,244	001,020,023,024, 028,035,037,052, 082,122,126,129	014,035,053,054, 059,068,104,245, 247			
CXC	040,052	030				
CYBERHOME					235	
CYBERNEX			055,084			
DAEWOO(大宇)	008,012,018,058, 072,084,085,086, 089,097,110,140, 188,189,199,231, 232,233,235	023	004,027,052,061, 072,080,093,094, 105,108,111		030	
DAYTRON	012,073,084,085, 086,088,097,110, 231,232,233		061,108			
DBX			082			
DENON	010,083,099,112, 207,251		009,028,029		069,198,200,202, 203,204	
DESAY					055,056	
DIAMOND				071,147		
DISASTRA	164					
DIWA			216			
DONGAN			207			
DONGDA			188			
DONGPENG					225	
DRAKE				028,043,044,045, 046,047,093		
DUMONT	084,085,086,231, 232,233	123				
DW445UR				199		
DWIN	016,201	135				
DX ANTENNA				201,212,217,229		
DYNATECH			023,103			
DZ445UR				200		
EAGLE				145,146		
EASTERN(泰山)		018,019		012,013,015,029, 149,189		
ECHOSTAR	122		127	136,150,218		
ELECTROBAND	147,202					
ELECTROHOME	008,012,048,086, 097,102,103,110, 161		012,057			
ELECTRPHONIC			012			
ELEPHANT				015,159,162		
EMEREX			001,078			

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
EMERSON	002,003,012,015, 016,018,036,040, 048,049,052,058, 078,079,084,085, 086,091,097,100, 110,115,116,117, 146,147,157,167, 180,181,182,183, 212,213,231,232, 233	030,038,125,133	007,012,023,034, 038,041,050,051, 052,054,055,057, 060,063,064,065, 066,074,083,086, 087,091,099,107, 112,255		
ENVISION	084,085,086,097, 231,232,233				
EVIDSON			023		
FIRSTA				069	
FISHER	002,024,074,078, 081,082,099,249		018,039,040,042, 059,246		109,116,139
FUJI			002,245		
FUJITSU	049,212,213,214			204	
FUNAI/FULLNESS	004,005,020,039, 040,049,052,054, 192,208,212,213, 219,222		023	012,013,015,029	238
FUTURETECH	040,052	030			
G.E.(奇異)	028,030,031,032, 040,052,057,086, 097,101,102,103, 114,133,135,136, 137,143,151,165, 176,186,216,244	126,128	021,032,053,054, 055,068,069,084, 103,245,247,252		249,250
G.I./JERROLD	016,036,058,084, 085,086,201,231, 232			005,060,062,098, 099,100,101,102, 103,104,110,111, 112,114,115,116, 119,120,121,128, 131,132,156,167, 168,219	
GARRARD			023		
GEMINI				066,067,116,119, 139	
GENERAL(FUJITS	049,106		033		
GIBRALTER	084,085,086,231, 232,233	123			
GMI(格得)				007,008,009,116, 183	
GO VIDEO			218		
GOLDSTAR(金星)	008,012,073,086, 087,089,097,110, 120,123,128,144, 161,215	004,018,021,022, 023,024,026,027, 051,075,129	012,021,022,087, 104		
GRADIENTE	042,043,200	129	023		
GRUNPY	040,049,052,212, 213	030			
HAITAI					112
HALLMARK	084,085,086,097, 231,232,233				
HAMLIN				059,070,071,079, 080,081	

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
HARLEY DEVIDSO	049,212,213		023		
HARMAN KARDO	045,140,211	001,020,024,028, 035,037,052,069	022,249		078
HARVARD	040,052	030			
HARWOOD			088		
HEADQUARTER			017		
HILCO	084,085,086,231, 232,233				
HI-Q			018		
HISENSE		044,045,046			
HITACHI(日立)	002,003,007,010, 011,012,014,018, 019,064,083,086, 087,092,097,098, 099,103,104,110, 112,141,161,205, 207,220,224,226, 252	018,019,022,023, 079,089,125,129, 132	009,010,023,059, 121,250	039,098,133	006,071,086,095, 126
HQ			023		
HUGHES				224	
HWALIN(華齡)				158	
IDALL(愛多)			237		232
IEEC(穎鴻)				008,009,011,027, 153,154,186	
INFINITY	045,211				
INFRARED		047			
INKEI					156
INSTANT REPLAY			053,054,097		
INTEQ		123			
JANIEL	108			220	
JBL	045,211				
JC. PENNEY	007,008,012,073, 086,089,097,101, 102,103,128,133, 135,136,137,145, 165,186		053,054,058,082, 097,106		
JCB		122			
JCL			053,054		
JEAN(美齊,俊)	002,012,014,028, 030,031,192,216, 220				
JEBSEE				010,014	
JENSEN	086,095,097		059,071		
JINGGE			217		
JVC(傑偉世)	004,005,007,012, 028,030,031,042, 043,054,076,080, 118,200,216,218	018,019	004,005,006,007, 008,048,049,058, 059,071,082,109		008,034,070,127, 128,129,224,230
KALE VISION				067	
KARCHER					148
KARDON			022		

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
KATHREIN				188	
KAWASHO	001,053,086,097, 148				
KAYPANI		127			
KEC	040,052	030	012,052		
KENWOOD	084,085,086,097, 161,174,231,232, 233,252		022,049,058,059, 082,109,215		096,102,117,118, 162,170,206,243
KLH			088		073,240
KLOSS NOVABEA	108,152,153				
KMC	012,110				
KODAK			012,245		
KOKA				016,054,064,148	
KOLIN(歌林)	003,008,009,011, 012		007,008		
KONKA(康家)	060	002,003,005,006, 007,010,015,016, 017,018,021,024, 027,038,039,042, 043,049,050			
KTV	012,040,052,084, 085,086,097,110, 147,179,231,232, 233	030,133			
LENCO					148,149,150,151, 152,153,171,172, 173,174,175,176, 177,178,179,180, 181
LEON				007,008,009,069, 116	
LG	012,084,085,086, 120,231,232,233	023,051,129			
LLOYD			041		
LLOYTRON	012				
LODGENET	156				
LOEWE	045,211				
LOGIK	156	122	088		
LUXMAN	072,086,087,097, 161	129			103,104
LXI	002,004,005,015, 016,045,054,073, 078,081,082,084, 085,086,114,203, 211,231,232,233	126	012,023,039,040		
MACOM				037,038,039,082, 094,095,219,221, 222,223	
MAGNASONIC			052		

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
MAGNAVOX	003,008,012,045, 049,073,084,085, 086,088,097,101, 104,105,106,152, 153,154,165,169, 171,211,212,213, 214,221,231,232, 233,246	131	023,053,054,061, 080,092,245,249, 251	030,031,073,097, 107,125,126,129, 137,145,146	186,191
MAGNIN			055,084		
MAJESTIC	156	122			
MALATA			194,196,229,231, 233,242		061
MARANTZ	003,008,045,084, 085,086,097,127, 152,153,211,231, 232,233		053,054,058,082, 092,245,249		255
MARTA			012,087		
MATHES	084,085,086,231, 232,233				
MATSUSHITA	209		014,245		
MEGA					149
MEGATRON	002,010,014,084, 085,086,099,112, 207,231,232,233				
MEI	147		053,054,245		
MEMOREX	002,008,078,084, 085,144,156,209, 210,231,232,233	122,129	012,014,017,018, 023,042,053,054, 055,080,084,103, 113,245		237
MGA/MITSUBISHI	003,008,012,024, 048,049,073,084, 085,086,088,089, 097,102,103,110, 161,174,175,210, 231,232,233		007,055,057,062, 073,074,084,090, 091		136
MGN TECHNOLO			055,084		
MIDLAND	012,028,030,031, 216,244,253	023,123,126	032		
MINOLTA			009,250		
MISSION					191
MITSUBISHI	003,008,009,011, 012,016,084,085, 086,210,231,232, 233		007,008,057,074, 082,091,103,109		007
MONTGOMERY W	012,156				
MOTOROLA	016,201	128	103,245		
MTC	006,008,084,085, 086,087,089,097, 147,159,161,231, 232,233		023,055,084		
MULTI TECH	040,052		023,032,088		
MULTIVISION	109				
MYRYAD					246

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
NAD	004,005,050,054, 077,084,085,086, 110,162,177,203, 206,231,232,233				253
NAKAMICHI					247
NEC	011,012,038,039, 040,041,042,043, 044,052,066,071, 073,084,085,086, 087,088,089,096, 097,108,161,172, 175,191,205,221, 231,232,233	018,019,027,079, 129,134	022,035,039,042, 049,058,059,071, 082,085,104,109		105,188
NEWAVE(菱威福)	008,011,014,015, 018,019,027,029				
NEXTWAVE				068	
NIKKO	018,084,085,086, 231,232,233		012		
NIKON			077		
NINTAUS					234
NOBLEX			055,084		
NORDMENDE					148
NORSAT				225,226	
NOSHI		124			
NSC				067,141	
NTC	018				
OAK				021,024,076,082, 084,105	
OENNEY			012		
OLYMPUS			245		
ONKING	196				
ONKYO	119				077,093,094,158, 159,163,164,165, 166,167,168
ONWA	040,052				
OPONICA			012,014,042,076, 103		
OPTIMUS	002,050,077,078, 110,139,162,177, 206,209				182,183
OPTONICA	017,063,064,066, 160				
ORION	039,040,048,049, 052,212,213,222	038	065,086,255		
OTHERS	197,215,224,225, 231,232,233,234, 235,236,240		114,115,116,117	171	015,016,017,018, 019,020,021,022, 023,024
PANASONIC/NATI	026,027,028,029, 030,031,032,045, 068,075,163,182, 186,209,211,216, 237,238,243,244	098,128	014,015,053,054, 095,096,097,098, 124,228,230,232, 245,248,253	019,059,061,062, 065,133,220	003,004,028,029, 032,033,038,062, 063,066,097,134, 138,194,195,248
PANDA		004,018,019,024, 025,027,040			
PANSAT				036	



<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
PARAGON(ZENIT)				085	
PENNEY	012,028,030,031, 054,084,085,086, 103,159,203,216, 231,232,233,244	023,124,126,129	009,022,055,084, 245,246		
PENTAX(尼康)		025	009,250		
PEONY(牡丹)		018,019,021,024, 026,027			
PERSONAL CABLE				032	
PHILCO	003,008,010,012, 045,084,085,086, 089,097,099,101, 104,112,152,153, 154,169,171,190, 207,211,231,232, 233	038,131	023,053,054,061, 087,092,245,255		
PHILIPS(飛利浦)	003,008,012,045, 075,086,089,104, 105,113,144,152, 153,164,169,171, 176,190,211	020,024	023,053,054,076, 092,097,118,119, 220,236,245,249	004,024,030,031, 073,097,107,125, 126,129,137,145, 146,174,175,176, 227	014,074,191,192, 193,212,213,214, 215,216,217,218, 219,241,255
PHISONEER					229
PICO				166	
PILOT	012,084,085,086, 231,232,233	023	012		
PIONEER(先鋒)	050,077,086,090, 093,097,110,158, 162,173,177,206	125	024,045,049,082, 109,125	065,143	011,012,013,031, 054,079,081,090, 097,110,111,119, 120,121,122,184, 187,221,245
PLAYER REC					064
PORTLAND	008,012,018,084, 085,086,097,110, 231,233	023	061,080,108,111		
PRESIDENT				163	
PRIMESTAR				177,191	
PRISM	028,030,031,216, 244				
PROFITRONIC			055,084		
PROSAT				173	
PROSCAN		126	247,252		249,250
PROTEC			088		
PROTON(普騰)	007,012,014,019, 033,034,035,084, 085,086,097,110, 112,120,126,159, 193,220,231,232, 233	127			191
PULSAR	084,085,086,231, 232,233	123	080		
PX(大通)				001,002,003,004, 022,023,026,192	
QISHENG(奇聲)		117,118	185,190,193,208		
QUARTER			017		
QUARTZ			017		

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
QUASAR	017,028,030,031, 032,063,064,066, 068,160,182,209, 216,244	128	014,053,054,245, 248		097
RADIO SHACK	002,012,017,040, 052,063,064,066, 068,073,078,082, 084,085,086,135, 160,182,231,232	023,030,126,129	023,039,053,076, 103		149,161
RADIOTONE					148
RADIX			012		
RANDTEK				145,146	
RCA	004,005,016,028, 030,031,054,057, 061,086,089,097, 114,133,134,135, 136,137,143,145, 178,191,195,198, 201,216,244	124,125,126,130	009,021,023,039, 046,053,054,055, 056,067,068,069, 084,097,103,121, 126,245,247,248, 250,251,252	062,074,109,164, 184	068,139,140,249, 250
RCARADIO	084,085,086,231, 232,233				
REALISTIC	002,012,017,040, 052,063,064,066, 073,078,082,084, 085,086,114,115, 117,231,232	023,030,129	012,017,018,023, 039,042,053,054, 076,087,103,245	140,209	182
REALISTUC	084,085,086,231, 232,233				
REGAL				059,071,079,081, 132	
REGENCY				106,107	
REMBRANDT				067	
RHAPSODY	147				
RICOH			077		
RINAI			023		
ROTEL	196,197,198,199				205,206,207,208, 209
RUNCO	084,085,086,231, 232,233	123,134	080		
SAE					191
SAISHO			112		
SALORA	168			135	
SAMPO(聲寶)	002,003,011,012, 013,014,015,016, 018,019,020,073, 084,085,086,088, 097,164,201,208, 220,231,232,233	023,127	103		
SAMSUNG(三星)	006,008,012,073, 084,085,086,087, 088,089,097,110, 147,159,161,184, 185,192,231,232	019,023,080,129	004,026,032,055, 077,084	019,051,061,067, 123	037,075,251
SAMSUX	012	023			
SANKY			080,103		

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
SANSEI	058				
SANSUI(山水)		038	023,049,059,082, 109,254,255		098,185,189,190
SANYO(三洋)	002,003,004,012, 014,018,023,024, 025,039,054,068, 069,070,073,074, 078,081,082,083, 124,131,139,204, 222,242	026,027,105	016,017,018,030, 036,037,042,055, 075,084		099,107,113,236
SATELLITE SERVI				205,213,238	
SCIENTIFIC ARLA				059,060,063,069, 077,100,114,117, 206	
SCIMITSU	084,085,086,231, 232,233				
SCOTCH	084,085,086,231, 232,233				
SCOTT	012,040,048,049, 052,073,084,085, 086,088,097,212, 213,231,232		004,007,034,051, 064,065,074,083, 087,107,112		
SEARS	002,004,005,006, 007,012,020,024, 042,043,045,049, 054,073,074,078, 081,082,084,085, 086,097,099,114, 124,125,135,161, 203,208,211,212, 213,231,232,233	037,126,129	009,012,017,018, 039,040,042,079, 087,245,246,250		
SEMIVOX	040,052	030			
SEMP	054,203		007,074		
SHACK	084,085,086,231, 232,233				
SHARP(夏普)	008,012,015,016, 017,020,021,062, 063,064,066,067, 086,097,110,142, 160,164,180,194, 201,221,223,248, 253	023	076,087,102,103		010,199,200,202, 203,204,226,254
SHERWOOD					156,157,161,169, 207,208,209,210, 211
SHINCO			192,197,209,210, 226,240,241		060,082
SHINTOM			088		
SHOGUN	084,085,086,231, 232,233		055,084		
SHURE	172				
SIGNATURE				098	
SIMPSON	104,105,106,152, 214				
SINGER(勝家)	192		088		
SKY GIANT				006,151,157	
SKY LINE				025,185	

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
SONY	001,002,003,006, 009,012,014,053, 092,130,138,139, 202,217,220,227, 241	024,071,101,121	001,002,003,023, 077,078,107,122, 123,187,198,245	090,165	001,002,026,027, 036,065,083,084, 141,142,143,144, 145,146,147
SOPU		114			
SOUNDESIGN	040,049,052,084, 085,086,097,104, 105,106,176,212, 213,214,231,232, 253	030			
SOWA(首華)	002,003,004,005, 008,011,012,014, 018,019,030,031, 054,220				
SPRUCER				062,065	
SQUAREVIEW	020,208				
SSS	040,052,084,085, 086,089,231,232, 233				
STANDARD COMP				067	
STARCAST				207	
STARCOM				060,062,098,099, 104,118,120,131, 132	
STARGATE				071	
STARLITE	040,052	030			
STS			009	050	
SUGANATURE		122			
SUPER GUIDE				068	
SUPER-MACY	108				
SUPERTECH	144				
SUPREME	202				
SYLVANIA	003,008,045,073, 084,085,086,088, 097,101,104,105, 152,153,154,165, 169,170,171,211, 231,232,233	131	023,053,054,061, 092,097,245,249	134	040,080,191,238
SYMPHONIC	004,005,020,040, 049,052,054,208		023		238
SYNCO	001,002,003,006, 011,012,014,015, 018,019,053,202, 220				
TADA				092	
TANDY	016,201		023		
TASHIKO(大碓谷)	008,009,012,014, 018,028,040,048, 052,220				
TATUNG(大同)	002,003,004,005, 006,008,009,012, 014,032,042,043, 054,160,220	128	004,005,006,031, 058,059,071		246

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
TCL(康家)	254	001,024,037,106, 107,108			
TEAC			023,058,059		154,155,160
TECHNICS	028,030,031,068, 182,209,216,244		014,054,245		133,196,197,248
TECHNOL ACE	049,212,213				
TECHWOOD	028,030,086,087, 097,216,244	129			
TECO(東元)	003,011,012,015, 018,028,030,031, 036,037,038,039, 040,041,042,043, 044,052,132,164		022		
TEECOM				127,187,203,228, 240,241	
TEKNIKA	006,007,008,012, 018,040,045,049, 052,084,085,086, 087,089,097,104, 105,106,108,110, 150,154,156,159, 161,210,211,212, 213,214,231,232, 233	030,122,129	012,023,033,053, 054,245	040	
TELECATION II	049,080,187			033,140	
TELEFUNKEN		129			
TELERENT	012,156				
TERA(泰瑞)	007,012,014,019, 033,034,035,084, 086,220				
TEXSCAN				134,142	
THOMSON/PROSC	133,135		023,068		025
TIANLONG					088
TMK	084,085,086,087, 097,100,161,231, 232,233	129	041,055,084		
TOCOM				073,078,108,137	
TOSHIBA(東芝)	002,003,004,005, 006,007,008,012, 014,015,016,031, 032,054,066,074, 078,082,111,129, 159,187,201,203	003,019,022,027, 092,108	004,005,006,007, 031,039,040,047, 051,074,077,079, 107,238	037,038,041,042, 072,124	005,035,041,042, 067,087,100,101, 187,223,252
TOSONIC	147				
TOTEVISION	012		012,055,084,087		
TRI-VISION				031,110,111,113, 138	
TUNTEX(東帝士)	192				
U-MEN	192				
UNIDEN SATELLI				096,156,202,208, 209,210,211,214, 215,231,232,233, 239	
UNIKA				073,122,125,126	
UNITECH			055,084		

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
UNITED CABLE				099,131	
UNITED SATELLIT				117	
UNIVERSAL(環宇)	101,103	018,022,024,025		048,049	
VECTOR RESEARC	084,085,086,231, 232,233		022,074,082		
VENTURER					239
VICTOR	042,043,107,200		004,007,074,082, 100,101		089,130,131,132
VIDEO CONCEPTS			007,023,074,082		
VIDEO WAY				087,088	
VIDEOSONIC			055		
VIDIKRON	045,211	037			
VIDTECH	008,084,085,086, 089,097,231,232, 233			035	
VIEWSTAR				030,031,073,097, 107,125,126,129, 137,145,146	
VIKING	108				
WARDS	008,012,017,045, 049,063,064,065, 066,073,084,085, 086,088,089,097, 101,103,104,105, 135,152,153,160, 169,171,211,212, 213,231,232,233, 253	122,129,131	009,018,023,051, 053,054,055,070, 076,084,087,088, 103,110,245,247, 249,251		
WESTING HOUSE	104				
WHITE WETINGH	058		052		
WINER				058,169,170	
WISO				017,018,055,056, 197	
XOCECO(廈華)		008,019,023,027, 029,030,031,032, 033,034,035,036, 109,110,111,112, 113			
XR-1000			023,088,245		
YAMAHA	008,084,085,086, 089,097,122,149, 161,231,232,233, 248,250		022,023,058,071, 082		069,091,092,106, 123,124,125,201
YINGZIBAO			186		
YORX	073,088,097				
ZAPAI			189,191,202,203, 204,205,206,214, 218,235,244		228,231
ZENITH(增你智)	018,154,155,172	122,123	002,019,023,077, 080,081,109	004,022,023,034, 037,038,043,045, 046,047,052,053, 057,083,084,086, 087,089,093,130, 234,235,236,237	020,072,108
ZHAQAI			199,200,201		

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD...</i>
三元		018,019,023,024			
上海,山茶,天津		004,018,019,021, 024,025,026,027			
天鵝,孔雀		004,018,019,021, 024,025,026,027			
永固,永寶		013,019,024,025			
如意,宇航		018,019,021,022, 023,024			
安華,成都		018,019,021,022, 023,024			
百花,百樂		015,018,019,024, 025,027			
西湖,快樂		018,019,022,023, 024,027			
步步高			195,213,225		057,233
亞玻				161	
佳麗彩,翔宇		019,021,027,083			
昆企		014,021,026,027			
東海,東寶		003,019,022,027, 092,108			
金海,金塔		013,018,019,024, 025,026,027			
金鳳,金鵲		013,018,019,024, 025,026,027			
長城,長江,長風		002,018,019,021, 022,024,026,027			
長飛,長海,青島		002,018,019,021, 022,024,026,027			
南聲,南寶		018,019,025,027			
威牌,春風		018,019,025,027			
星海,菊花		018,019,023,024, 027,080			
紅岩,虹美		018,019,023,024, 025,027			
美樂		018,019,023,024, 025,027			
飛浪,飛躍		018,019,024,026, 027			
飛燕,飛鹿		018,019,024,026, 027			
海虹,海樂		018,019,021,024, 027			
海燕,珠海		018,019,021,024, 027			
康立,康虹,康藝		019,024,025,076			
凱歌,創維		014,018,019,023, 024,026			
華日,華利		018,019,021,022, 026,027			
華強,華發		018,019,021,022, 026,027			
黃山,黃河		005,014,018,019, 021,022,024,026, 027			

<i>Brand</i>	<i>TV1</i>	<i>TV2</i>	<i>VCR/VCD</i>	<i>CBL/Sat</i>	<i>AUX(DVD,CD..</i>
黃海,黃龍		005,014,018,019, 021,022,024,026, 027			
福日,紹峰		018,022,027			
廣佑				091	
樂華,龍江,優拉納斯		018,019,024			
優視達,襄陽,寶石花		018,019,024,025, 027,047			
鶯歌,贛新		018,019,024,025, 027,047			